

Installation Warranty Maintenance

TIMBER
BAMBOO
LAMINATE



Golden Elite Group

Ph: (07) 3189 7117
Admin@goldenelitegroup.com.au

Table of Contents

GENERAL INSTALLATION INSTRUCTIONS:	2
1.0) PRODUCT VARIATIONS	2
2.0) VERIFY PRODUCT ACCEPTANCE BEFORE AND DURING INSTALLATION ..	2
3.0) MOISTURE	3
4.0) SITE ASSESSMENT	3
5.0) GENERAL SUBFLOOR REQUIREMENTS	3
5.1) Flatness:.....	4
5.2) Clean when adhering flooring:	4
5.3) Moisture content:	4
6.0) SITE CONDITIONS AND ACCLIMATIZATION	4
7.0) INSTALLATION PRACTICES	4
8.0) EXPANSION REQUIREMENTS	5
9.0) SLIP RATING	6
10.0) PROTECTING THE FLOOR AFTER INSTALLATION	6
11.0) ACCEPTABLE NOISE FROM THE INSTALLED FLOOR	6
12.0) RESPONSIBILITIES OF THE OWNER / INSTALLER	6
WARRANTY	7
13.0) AUSTRALIAN CONSUMER LAW	7
14.0) ACCEPTABLE QUALITY	7
15.0) MAJOR FAILURE	8
16.0) WARRANTY CONDITIONS PRIOR TO INSTALLATION	8
17.0) EXCLUSIONS OF WARRANTY	9
18.0) Warranty Claims	11
CARE AND MAINTENANCE:	11
19.0) GENERAL:	11
20.0) FREQUENTLY ASKED QUESTIONS:	12
20.1) What is the best way to mop my Golden Elite floor?	12
20.2) How can I protect the finish of my floor from wear over time?	12
20.3) What are the best environmental conditions for my flooring?.....	13
20.4) What impact will large windows, doors, bi-fold doors and skylights that face the sun for extended periods have on my floor?	13
20.5) How do I fix scratches on my floor finish and damaged boards?.....	13
20.6) Can I refinish my Golden Elite Flooring?.....	13
20.7) What changes can I expect in my flooring from season to season?.....	13
20.8) Can I put heavy furniture on floated flooring?.....	14

GENERAL INSTALLATION INSTRUCTIONS:

1.0) PRODUCT VARIATIONS

Golden Elite Group's flooring utilises completely natural materials. Our Timber veneer is crafted from naturally grown French Oak from France, and our bamboo is also sourced from top quality species. The luxury from nature means there will be colour variations from piece to piece and batch to batch.

Therefore, care needs to be taken when selecting from a display sample as there will be differences between the display and dispatched stock.

The moisture content of flooring will also change in accordance with the weather. Therefore, it is expected that the surface of the floor will change and could develop some checking (splits) in the board surface, gaps at board joints and changes in colour, leading to further variations.

2.0) VERIFY PRODUCT ACCEPTANCE BEFORE AND DURING INSTALLATION

When calculating the amount of flooring required, please add an additional 10% to cover wastage material. This is because some boards are required to be cut and the remainder may be unusable, or some products may be affected by transport or other unpredictable events.

Golden Elite Group's flooring is manufactured in accordance with industry standards, which permit a limited amount of manufacturing, grading and natural imperfections. If the installer deems the flooring or floorboards to be unusable, do not install the flooring. Immediately contact the distributor/retailer from which the flooring was purchased. No claim will be accepted for materials considered unsuitable once they are installed.

Installation of any material will be considered acceptance by conduct, and that the recipient acknowledges and accepts the standard of the material delivered. It is expected that the installer/owner will inspect all flooring with sufficient lighting before installation. Upon installation, all responsibility of the product including product maintenance and care will be transferred to the owner.

It is suggested that boards deemed acceptable but less appealing can be placed in closets, near walls or simply not be used. The use of putty, filler sticks or markers to touch-up flooring during installation is considered normal practice. It is also the responsibility of the owner/

installer to determine if the job site conditions, environmental conditions and subfloor conditions are acceptable for the installation of Golden Elite Group's Flooring.

3.0) MOISTURE

With all installations, an appropriate moisture barrier must be used. However, it is also a requirement that the subfloor is tested prior to installation.

- Concrete-subfloors need to have a moisture content of less than 4% (assessed by impedance meter such as the Tramex).
- On plywood and particleboard, the moisture content is not to exceed 14%.

Please note that test results are only applicable to the day of testing and will not ensure that moisture will not fluctuate with seasonal changes. Again, it is emphasized that regardless of subfloor moisture content, the use of a moisture barrier is required for all installations.

Golden Elite Group's Flooring does not warrant against moisture related problems. If results show subfloor moisture content to be high, determine its source and correct problem before installation.

4.0) SITE ASSESSMENT

On site assessment of the job location is essential, it is the installer's responsibility to determine that the jobsite's environment and subfloor conditions all meet the requirements of the Australasian Timber Flooring Association.

It is necessary to confirm proper drainage is in action around the building. Lack of moisture protection can allow excessive water or moisture to penetrate walls, flow beneath concrete slabs and into crawl spaces. With crawl spaces the ground needs to remain dry or present a dry surface between the ground and joists. Any seepage or other moisture needs to be dealt with through enclosed drainage systems with exposed earth then fully covered with a 200um plastic moisture vapour barrier to inhibit soil moisture evaporation. Similarly, the building needs to be checked for signs of moisture ingress and if discovered dealt with prior to floor installation

5.0) GENERAL SUBFLOOR REQUIREMENTS

The subfloor must be structurally sound, sufficiently flat and dry, and when applying adhesives onto the slabs, it must be sufficiently clean. Please refer to the AFTA guidelines, as it is a requirement. Note also that Golden Elite Group flooring is intended for installation on or above grade subfloors only. **Flooring installed in below grade subfloors is not covered under warranty.**

5.1) Flatness:

When adhering to the subfloor it must be flat to a tolerance of 3mm in 3m anywhere across the floor area. For floated installations the tolerance is also 3mm in 3m anywhere across the floor area. With concrete subfloors, grinding high spots and using appropriate levelling compounds in low spots are methods used to provide a sufficiently flat surface. Concrete that is not properly levelled can cause improper adhesive transfer, hollow spots, and squeaks. For timber, plywood and particleboard subfloors, high spots may be sanded down. Low spots can be cut out and repaired although for some installations levelling compounds may be used.

5.2) Clean when adhering flooring:

Concrete must be free of dirt, oil, paint, old adhesive, wax, sealers and curing agents. Similarly, particleboard and plywood subfloors need to be clean and this may require removing the wax layer on particleboard.

5.3) Moisture content:

All subfloors should be tested for moisture content (refer to s3.0). If high moisture readings are found, identify the moisture source and correct the problem before installation. Concrete slab subfloor must also be fully cured and at least 60 days old. Allow extra drying time for the levelling compounds and test again.

6.0) SITE CONDITIONS AND ACCLIMATIZATION

Do not deliver flooring to the job site until the building has been enclosed with windows and doors, all cement, plastering, and other “wet” work has been completed. Products are to be stored away from direct sunlight and extreme conditions (e.g. outside a sealed area).

As a general rule, the ideal relative humidity range for Golden Elite Group Flooring is average daily conditions of **30-65%** relative humidity and installed between **15°C to 30°C**. Flooring should be acclimatised in the packaging for 48 hours in the middle of the room at room temperature before installation to enable the boxes of flooring to become accustomed to the laying environment.

Flooring is only to be opened when the installation is ready to commence and only the quantity that can be installed at the time of installation should be opened. Boxes should not be left opened or product unpacked as the relative humidity can affect the ease to which the boards will fit together.

7.0) INSTALLATION PRACTICES

During installation, work from several cartons at a time to achieve a uniform appearance across the entire floor. Mix and mingle boards when laying the floor for maximum aesthetic appearance as natural variations in colour are not covered under warranty (refer s1.0).

Remove any existing skirting boards, which can be replaced after installation or use scotia. Undercut door jambs and or doorway thresholds. With floating floors, the floor must have 1mm clearance under the skirtings and door jamb, and not fixed with silicone etc, make sure the floor to be able to float freely.

To cover expansion allowances, skirting boards, scotia, universal trims, L trims, U Trims and reducer trims can be used. Matching or similar colour stair nosing may also available however natural stair nosing will have colour variations.

Our staircase system includes the use of two products: trade & riser. Where the trade is the horizontal component of the staircase and riser is the vertical component. For installation, the trade and riser must be fully glued on both vertical and horizontal planes, note make sure there are no hollow spaces as this will eliminate the weak spots in the staircase structure. Ultimately resulting in not only an ascetically pleasing but also safe and durable staircase. If installation is incompatible with provided instruction product and installation warranty is invalid, and all responsibility is with the owner/installer.

With floated floors NEVER lay under permanent or fixed cabinetry. NEVER install floated flooring against any vertical or fixed object such as a fireplace, columns, islands, door jambs, floor outlets, etc. Failure to follow this guideline may result in separation at board joints or buckled floors. Never nail or screw anything through a FLOATED floor. Save extra flooring for future repairs as products will have variations from batch to batch.

8.0) EXPANSION REQUIREMENTS

A minimum of 8-18mm is required all around the perimeter of the floor including around pipes, under doors, around the kitchen, at doorsteps and anywhere that is needed to allow for floor expansion and contraction during different seasons and climates. Please note that the floor may move more in one direction than another. Locations with higher relative humidity should at least have expansion allowance of 18mm. Locations with low relative humidity should have minimum expansion allowance of 8mm. Please note all flooring will expand in width more than the length and as a general guideline, floors may expand and contract up to 3mm per meter in the width of the floor (across the board width). When installing, care should be taken regarding direction of flooring installation as this affects the possible need for intermediate expansion allowance. Floors should not be laid over maximum flooring allowances in below table without intermediate expansion allowance being provided. Where required undercut gyprock for greater expansion and shrinkage allowances.

PRODUCT	ALLOWANCES FLOATING	ALLOWANCES DIRECT GLUE DOWN
Engineered Timber	Width 6m x Length 8m	Width 10m x Length 12m
Engineered Bamboo	Width 6m x Length 8m	Width 10m x Length 12m
Solid Bamboo	Width 6m x Length 8m	Under GE approved glue. Width 7m x length 9m
Laminate	Width 6m x Length 8m	Cannot be glued down
Herringbone	Width 4m x Length 4m	Width 10m x Length 12m

9.0) SLIP RATING

When installing stairs, a 50mm anti-slip tape must be used to achieve R10 or P3 slip rating requirements for internal stairs. Clarification of slip rating requirements must be made prior to installation of Golden Elite Group Flooring products.

10.0) PROTECTING THE FLOOR AFTER INSTALLATION

Golden Elite Group recommends using a temporary floor protection product to avoid damage to the floor from the time the floor being laid and works being completed for handover. The protective covering must also be sufficient to prevent any damage, be properly installed to prevent objects going under the covering and be fitted to cover the complete floor. If it does not cover to the walls colour change from covered to uncovered can become evident.

11.0) ACCEPTABLE NOISE FROM THE INSTALLED FLOOR

Floor noise is to a degree normal and will vary from one installation to the next. Occasional noise is due to structural movement and may relate to subfloor type, flatness, deflection, and/or be related to the fasteners, changes in environmental conditions, and the amount of topside pressure applied to the flooring. For these reasons, floor noise is not considered a product or manufacturer defect unless excessive noise is associated with board manufacturing tolerances.

12.0) RESPONSIBILITIES OF THE OWNER / INSTALLER

Proper installation and maintenance are key elements in achieving the best flooring results.

The installer/owner must determine that the jobsite meets or exceeds all applicable Australasian Timber Flooring Association's industry standards. Golden Elite Group Flooring does NOT warrant against failure resulting from or connected with the subfloor, job site

damage, or environmental extremes after installation. Golden Elite Group Flooring makes no warranty or guarantee of the quality of the chosen installer's work or of a particular installation performed by them. Golden Elite Group Flooring disclaims all liability for any errors or improprieties in the installation of its products by an installer. Golden Elite Group Flooring products will be subject to variations in colour that may occur within and between individual flooring planks.

It is the responsibility of the installer/ owner to follow all guidelines provided by Golden Elite Group Flooring for success. Controlling flooring moisture content is important for success. Golden Elite Flooring, like all other timber, laminate and bamboo flooring, is hygroscopic. That is both board width and length change with the absorption or release of moisture. The amount of movement varies depending on the preventative steps taken at the time of installation and the stability of the home environment thereafter.

Follow Golden Elite Group Flooring Maintenance & Care Guidelines to keep your floor looking its best after installation.

WARRANTY

13.0) AUSTRALIAN CONSUMER LAW

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if goods fail to be of acceptable quality and the failure does not amount to a major failure. Please refer to the ACL to see further information.

14.0) ACCEPTABLE QUALITY

Golden Elite Group Pty Ltd warrants the original purchaser that our timber, bamboo and laminate flooring in the original manufactured state free from structural defects and the limited Structural Warranty as per the table below. We warrant to the original purchaser that the wear layer (Coating Warranty) will not peel or separate from the flooring plank in residential and commercial applications as per the table below if it is installed and maintained according to the Golden Elite Group timber, bamboo and laminate installation and maintenance instructions.

PRODUCT	Residential Limited Structural Warranty	Commercial Limited Structural Warranty	Residential Limited Wear Warranty	Commercial Limited Wear Warranty
Engineered Timber	25 Years	10 Years	20 Years	5 Years
Engineered Bamboo	25 Years	10 Years	20 Years	5 Years

Solid Bamboo	25 Years	10 Years	20 Years	5 Years
Laminate 12mm	25 Years	10 Years	20 Years	5 Years
Laminate 8mm	15 Years	5 Years	10 Years	5 Years
Herringbone	25 Years	10 Years	20 Years	5 Years

This warranty implies conditions of normal use and appropriate care, as set out in our installation and maintenance instructions. Gloss reduction and scratches caused by regular traffic are normal and not considered wear through and are not covered by this warranty. Areas of less than 10% of total flooring surface area that could be affected by high traffic wear or incidental damage are not covered by this warranty.

Please ensure that you are aware of what type of finish coating or wear layer has been applied to the boards prior to commencing any cleaning or maintenance to ensure appropriate cleaning practices

15.0) MAJOR FAILURE

As Golden Elite timber and bamboo flooring are natural products, some minor splits, cracks and blemishes may occur in the coated surface under more adverse conditions. This is referred to as surface checking and is normal with natural wood boards. Appropriate care should be taken to avoid scratching and chipping from occurring as the pre-finish coating is not scratch or chip proof, although it is hard wearing. Additionally, as is the case with timber floors, there may be slight variation in gloss between boards. Please note that gloss variation, minor splits, cracks and blemishes, scratches and chips are not considered as major failures. They are imperfections associated with natural timber and bamboo flooring. Nevertheless, this provision is not intended to diminish or reduce the statutory rights of any purchaser. Additionally, Golden Elite timber and bamboo flooring warranty only cover the manufactured goods. Installation warranties should be obtained from the individual/company completing the installation.

16.0) WARRANTY CONDITIONS PRIOR TO INSTALLATION

The purchaser/property owner/installer must inspect all material in good lighting prior to installation, ensuring that there are no visible manufacturing defects and that all materials match their description. Should any possible defects exist, **please contact the supplier immediately** for an inspection and potential replacement prior to installation. Any questions regarding product quality must be satisfied prior to installation. Golden Elite Group Pty Ltd does not warrant or guarantee the chosen installer's work/performance/ability. The purchaser/property owner/installer has the sole responsibility of making sure that site conditions are appropriate for the installation of the chosen flooring.

Golden Elite Group Pty Ltd does not accept any responsibility for material failure that may be associated with the site conditions or method of installation. This limited warranty is only

valid for the original purchaser and only at the original installation site. This limited warranty is not transferable.

Until just prior to installation, the product must be kept in its packaging and stored in a completed building where it is protected from the environment. This means that the building must have a completed roof, walls and sub-floor. Golden Elite Group flooring should only be installed in the end stages of a construction project when all tradespeople have left the site. Any work that involves water or moisture should be finalised prior to installation.

Golden Elite Group flooring is suitable for indoor installations only and should not be used in outdoor environments. Additionally, the indoor area should be protected from direct sunlight and heat. If heating and cooling systems are installed, temperature and humidity should remain reasonably constant from 48 hours before, during and until 48 hours after installation; and at a temperature and humidity for normal living conditions. Timber, bamboo and laminate flooring must not be installed in wet areas. These include toilets, bathrooms, laundries and other similar rooms. Note that the flooring may be installed in kitchens.

17.0) EXCLUSIONS OF WARRANTY

Damage associated with negligence; transportation; storage; handling; installation; inappropriate maintenance; cleaning with steam mops or wet mops; or any other external causes that can damage the floor are not covered by this warranty. Additionally, the damage due to the following are also excluded from warranty: scratches; indentations; exposure to extreme heat, damage from intense sunlight, very low or very high humidity or moisture; water saturation; lack of building ventilation during extreme heat and humidity; accidents; abuse or misuse; any pets or animals; any footwear; unauthorised or improper alterations or repairs; or failure to adhere to all of Golden Elite Group's timber/bamboo/laminate installation guidelines and maintenance instructions.

Golden Elite Group's timber, bamboo and laminate flooring that is installed in wet areas, including toilets, bathrooms, laundries and other similar rooms will not be covered by this warranty.

Variations in texture, grain, colour and pattern are normal and not considered defects. Thus, these are not covered by this warranty. This warranty does not cover variations in grain pattern or colour between the samples and the installed floor. This warranty does not cover flooring that was installed despite being damaged or visibly defective, or became damaged/defective due to installation. This warranty does not cover labour costs for the repairing or replacing of incorrectly installed or damaged/defective flooring. All tongue & groove timber including herringbone is recommended to be direct glued down. Tongue & Groove timber long boards and Herringbone in floating applications will result in small gaps and some creaking noises and is not within manufactures warranty. In commercial applications, all timber (not laminate or bamboo) should be direct glued down.

Variations of 5% or less in grading are not covered by this warranty. Defective boards that amount to 5% or less of total flooring boards are not covered by this warranty. As timber and bamboo flooring is manufactured from a natural material, colour variations between batches are normal. Exposure to sunlight and ultraviolet light will affect the colour and appearance of the boards. All flooring types will naturally expand and contract with seasonal changes in humidity and temperature. This is not a manufacturing defect and is not covered by this warranty. If the relative air humidity exceeds 65% or drops below 30%, excessive expansion and shrinkage may occur which may lead to checking (small surface cracks), delamination in timber products and cupping – all of which are not covered by this warranty. Appropriate care should be taken to maintain a relatively consistent indoor temperature and humidity.

17.1) Colour changes in the engineered flooring



Over time with the influence of ultraviolet light, colour changes occur both in the timber and the coating. As the changes are gradual it is often not noticed. However, particularly if floor rugs are used in an area and then shifted the colour tones where the rug was may be significantly different from the remainder of the floor. Most engineered flooring is prefinished, and a range of different coating types are used. The first photo shows flooring with a prefinished UV cured lacquer and the second photo an oiled finish.

17.2) Appearance in the floor

The appearance can be either darker or lighter where the floor rug or other object covering the floor was. In some instances, the contrast is so pronounced that you would not consider one end of a board as belonging to the other end, however the contrast is often less severe, as shown in the photos.

17.3) Remedial Measures

It is prudent for installers to make owners aware of this possibility. Regarding floor rugs it can also be suggested to not use them for six or so months to enable the whole floor to adjust more evenly. Although this may not overcome the situation completely it will assist. If the contrast becomes severe the only way to redress the situation is to sand and coat the floor. However, note that onsite sanding and coating often results in some finishing imperfections that were not present in the original factory finished boards.

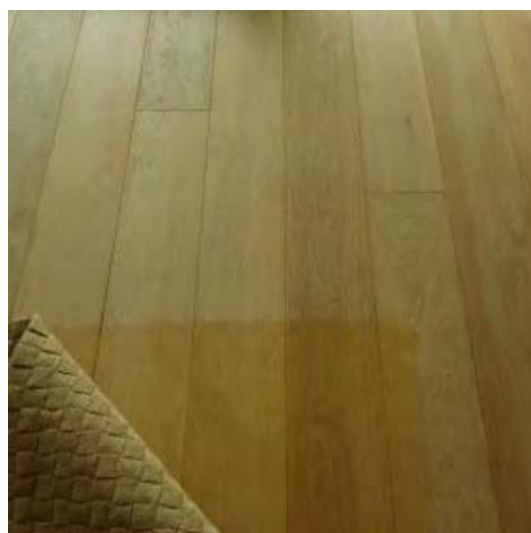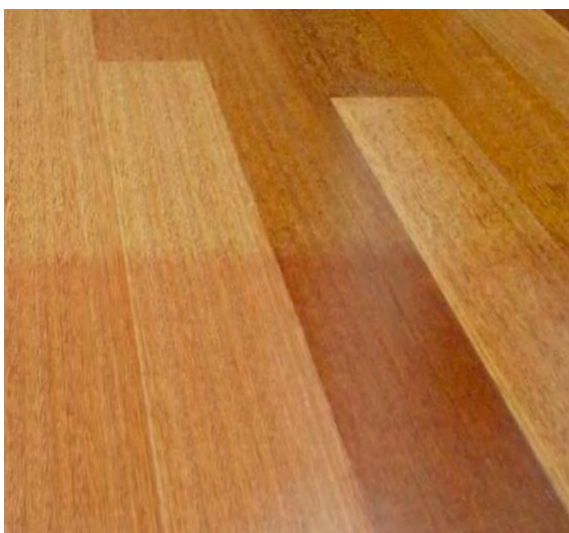

18.0) Warranty Claims

For claims accepted by Golden Elite Group Pty Ltd made under this limited warranty, the affected material will be replaced with the same product or another similar product of equal value within our Golden Elite Group Range. The remedy is solely the replacement of any defective products except when product defects could not be observed prior to laying. With claims prior to laying only the cost of materials will be covered and not other related costs. Regardless of circumstances, Golden Elite Group Pty Ltd shall not be held liable for any damages or loss arising from or in association with the purchase; use of product; inability to use product; or resulting from any special, indirect, incidental or consequential damages. All claims must be in writing, including photographic evidence and be mailed to the place of purchase. Any party that commences floor repair or maintenance without the consent of Golden Elite Group Pty Ltd will be held responsible for the cost of the repair or replacement. **Settlements shall be accompanied by a waiver signed by all parties.**

CARE AND MAINTENANCE:

19.0) GENERAL:

- It is recommended that owners move in within two weeks after the installation of the Engineered timber. If the place is vacant for prolonged periods of time, please place several buckets of water or a humidifier to maintain the moisture content of the flooring. In order to avoid cracking, shrinking expanding and bulging of the flooring please do not over humidify or leave the place too dry. Note if the maintenance and care don't comply with listed standards, and results in damaged products, the owner is fully responsible.
- To clean our flooring products, Sweep or vacuum the floor regularly to remove dirt, sand or grit, then use a dry soft towel to clean the surface. If you are living in a hot and dry area, use a lightly dampened soft towel to clean the surface, do not use a wet mop or other cleaning product, Use a pH neutral hardwood floor cleaner and a microfiber mop during routine cleaning. Cleaning using the Bona mop is highly recommended as it is the only cleaning product that is fully covered under warranty. (<https://bona.com.au/products/floor-care-residential/bona-timber-spray-mop>).
- Prevent the floor from being exposed to strong and constant sunlight. This prevents the paint and the product from ageing, shrinking and cracking. Please avoid long periods of hot or cold air from appliances like the AC, as this may lead to shrinking or expansion of the product.
- Prevent water from soaking the flooring product including overflow from the balcony, toilet, kitchen etc. Please ensure the taps are closed completely prior to leaving the house, and especially prevent flooring products in contact with hot water. In the case of an accidental spill of water, soak up the water ASAP to minimise damages.

- Do not slide or drag heavy furniture and appliances – pick them up instead. Apply felt tips / protective caps to furniture legs. Apply soft rubber casters to rolling furniture.
- Trim pets' nails/claws to minimise scratching.
- Use curtains and blinds to soften any direct sunlight and UV rays shining onto the floor.
- Keep relative humidity between 30%-65%. It is ideal to avoid the extreme ends of this acceptable range.
- Place interior and exterior doormats at entrances to stop dirt and moisture from being brought in by foot. Rugs should also be placed in high traffic areas and in front of kitchen sinks.
- Do not use rugs and mats with solid rubber or vinyl backings. Rugs need to be made from a breathable material to prevent moisture entrapment. It is also recommended to use a breathable rug underlay that has a mesh or grid pattern.
- Do not wet-mop a timber, bamboo or laminate floor. If water is left to stand, it can permanently damage the boards.
- Never use the following products on your floor: mineral spirits; ammonia-based cleaners; wax-based products; acrylic finishes; bleach; detergent; polishes; abrasive cleaning soaps; oil soaps; or acidic products such as vinegar. Never apply a wax treatment to your floor.

20.0) FREQUENTLY ASKED QUESTIONS:

20.1) What is the best way to mop my Golden Elite floor?

Do not use a wet or damp mop on your floor. Water left to stand may damage the floor. You can use a very-slightly dampened (almost dry) mop to spot-clean – note that excessive moisture may dull the finish. For flooring located in the kitchen, an area rug in front of the kitchen sink will help with keeping floors dry. We recommend using Bona Pro Hardwood Floor Cleaner & Bona Pro Hardwood Floor Mop to clean your floor.

20.2) How can I protect the finish of my floor from wear over time?

Sweep (using a broom or dust mop) or vacuum your floor on a regular basis. If vacuuming, use a brush or felt vacuum head instead of a beater bar or hard head. Use doormats both inside and outside entrances to prevent dirt and moisture from being transferred to the floor. Use rugs for high traffic areas. Pets should have their nails/claws trimmed to minimise scratching. Minimise the floor's contact with moisture. Avoid walking on the floor with high heels, sports shoes and cleats. Avoid dragging or sliding heavy furniture or appliances along the floor.

20.3) What are the best environmental conditions for my flooring?

The ideal conditions are typically a relative humidity of 30%-65% and a temperature of 15° to 30° Celsius. There are some geographic/climatic exceptions where the ideal humidity range may be higher or lower. Maintaining ideal humidity can at times be provided with moderate use of heating and cooling systems. It is the owner's responsibility to maintain humidity in the recommended range. Regular ventilation is also necessary, even when the property is not occupied.

20.4) What impact will large windows, doors, bi-fold doors and skylights that face the sun for extended periods have on my floor?

Flooring that regularly receives direct sunlight may fade, shrink and become damaged from surface drying. Please protect floors from intense direct sunlight by using either window coverings, window tinting, pergolas or verandas. Direct sunlight damage is not covered by the warranty.

20.5) How do I fix scratches on my floor finish and damaged boards?

A white scratch indicates that the finish has not been compromised and is repairable. (Excluding laminate) Such scratches and blemishes should be easily removed with a flooring cleaner. For deeper scratches, where the raw wood (Excluding laminate) has not been exposed, light buffing with a white polishing pad should restore shine to the dull area, making the damage less obvious. A Picobello flooring repair kit is recommended for repairing small scratches. For a more professional repair, please contact Konig Australia. For severe damage, the best option may be to replace the board(s).

20.6) Can I refinish my Golden Elite Flooring?

Major modifications may void the warranty and are not recommended as repairs are not a guaranteed solution. Excessive sanding is not covered under warranty. Nevertheless, the method of refinishing Golden Elite flooring is the same as any hardwood flooring. This excludes laminate flooring and also flooring with less than a 4mm veneer. Please always seek assistance from an ATFA member contractor, and always test on a sample plank before you proceed.

20.7) What changes can I expect in my flooring from season to season?

As with any timber, bamboo and laminate product, Golden Elite floors are subject to changes in temperature and humidity. Seasonal fluctuations in relative humidity and temperature will cause the flooring to expand and contract. With warm, humid weather, flooring expands. With dry weather, flooring contracts. This seasonal variation is characteristic of wood flooring and can be regulated by using an HVAC system (heating, ventilation and air conditioning) to help maintain an ideal relative humidity of 30%-65%.

20.8) Can I put heavy furniture on floated flooring?

Heavy furniture (200kg+) may hinder the floated floor's free movement during natural expansion and contraction, unless the floor has been directly glued down. (excluding bamboo and laminate) Hindering this movement may lead to issues such as buckling or separation between boards. It may also affect flooring noise. Some flooring noise is normal during natural expansion and contraction and may also be affected by relative humidity, the type of subfloor, subfloor flatness, deflection, fasteners used and any changes in environmental conditions.